


alpinestars

BTO

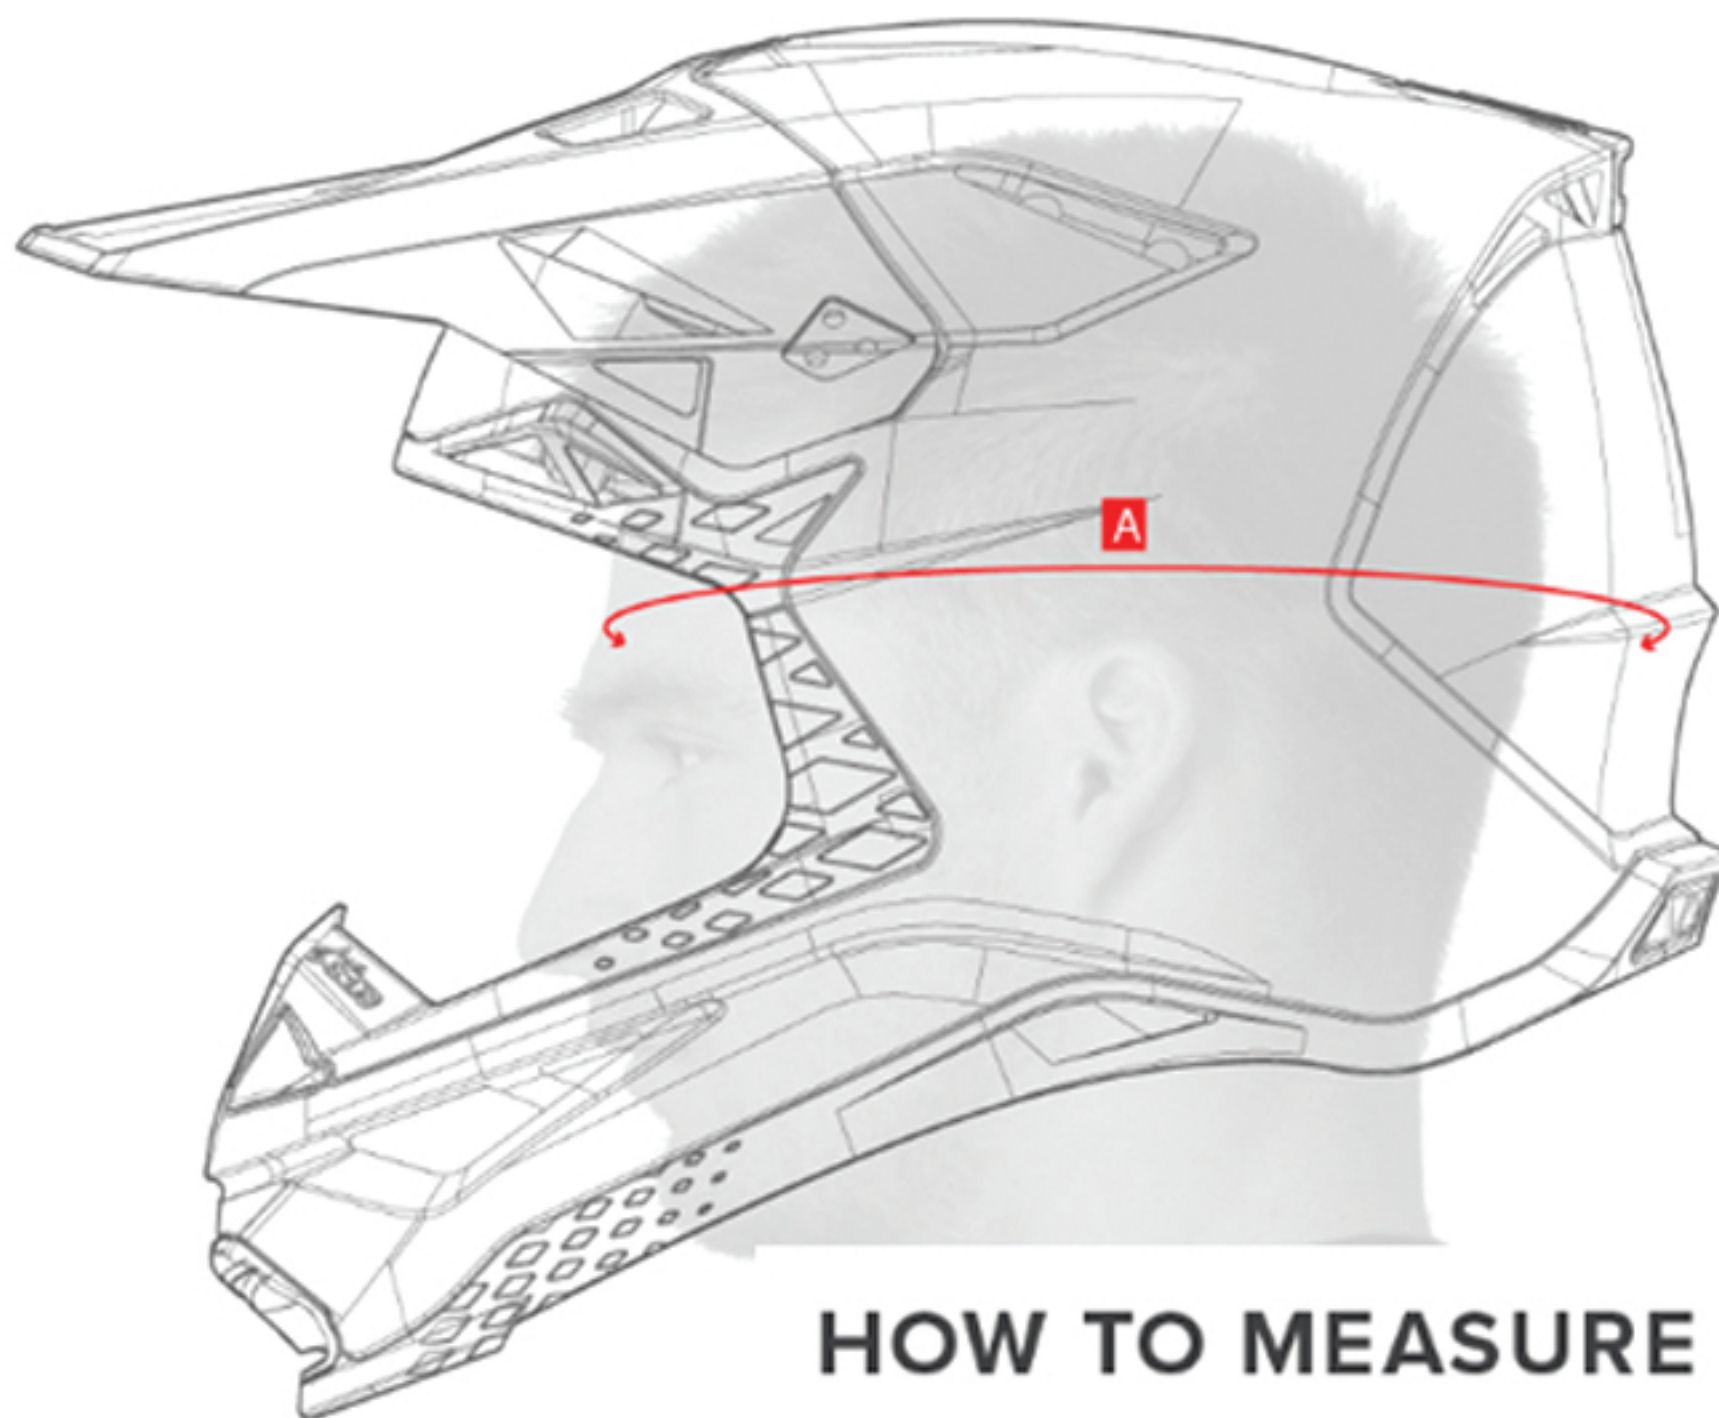

HOW TO MEASURE

A Head Circumference:
Using a measuring tape, measure the head circumference at the head's widest point, just above the eyebrows and the ears.

PRODUCT SIZE	HEAD MEASUREMENT
	A
INTL SIZE	HEAD CIRCUMFERENCE (CM)
XS	53 - 54
S	55 - 56
M	57 - 58
L	59 - 60
XL	61 - 62
XXL	63 - 64
INTL SIZE	HEAD CIRCUMFERENCE (INCHES)
XS	20.8 - 21.2
S	21.6 - 22
M	22.4 - 22.8
L	23.2 - 23.6
XL	24 - 24.4
XXL	24.8 - 25.2

SUPERTECH SM-8/SM-10